

Las frecuencias por debajo de 433 MHz están prohibidas en Europa. Solo se permiten en países donde están autorizadas y que no pertenecen a la UE. Cualquier uso o manejo de estas frecuencias es responsabilidad del comprador.

En cumplimiento de la DIRECTIVA 2014/53/EU

FABRICADO POR /FAB: ESB06450563



MANUAL



CARACTERÍSTICAS TÉCNICAS

- ✓ Modelo TX NEW CLONER
- ✓ 1 Batería 2032
- ✓ Frecuencia de 433,92 a 900 Mhz
- ✓ 4 Canales
- ✓ Software patentado New Cloner

ATENCIÓN, ESTE MANDO TIENE DOS MODOS DE TRABAJO:

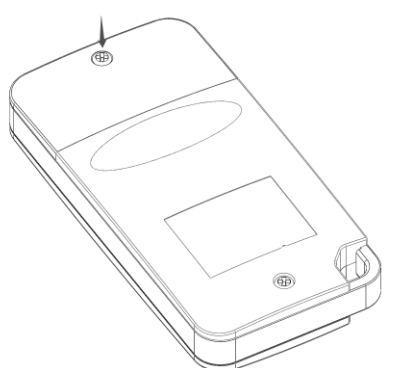
- 1. ENTRADA DIRECTA EN EL RECEPTOR**
- 2. CLON**

ATENCIÓN: EN EL TX NEW CLONER (MULTICLONER) SE PUEDE PONER UNA MARCA Y UNA FRECUENCIA DIFERENTE EN CADA BOTÓN (CANAL) SOLO EN MODOS CLON.

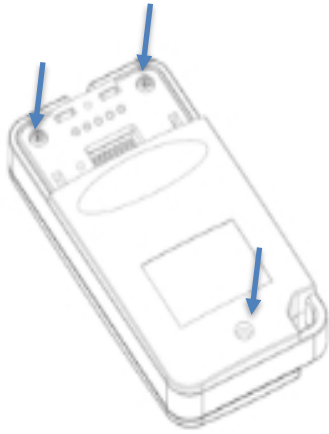
MODO DE ENTRADA DIRECTA EN EL RECEPTOR

INSTRUCCIONES DE PROGRAMACIÓN

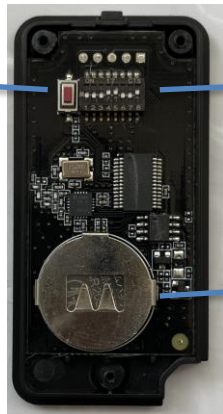
1. Localizar el selector DIP en el interior del mando. Retirar el tornillo superior de la parte trasera.



2. Seleccionar la combinación en el DIP para la marca elegida. Ir a la tabla 1.
3. El mando está listo para ser usado. Consultar el manual de usuario del receptor.
4. si fuse necesario cambiar la pila, retirar los tornillos.



BOTÓN SEMILLA



DIP'S

PILA

Nota: Para BFT, MUTANCODE y ERREKA es necesario presionar el botón oculto (con un clip u objeto pequeño) antes de pulsar un botón (botones del 1 al 4).

Frequencies below 433 MHz are forbidden in Europe. They are only allowed in countries where they are authorized and don't belong to the EU. Any handling or use of these frequencies are at buyer's responsibility.

In compliance with DIRECTIVE 2014/53/EU

MANUFACTURED BY /FAB: ESB06450563



MANUAL TX NEW CLONER



TECHNICAL FEATURES

- ✓ Model TX NEWCLONER
- ✓ 1 battery 2032
- ✓ Frequencies 433,92 to 900 MHz
- ✓ 4 Channels
- ✓ Software New Cloner patented

ATTENTION, THIS REMOTE WORKS IN TWO DIFFERENT MODES:

1. DIRECT ENTRY INTO THE RECEIVER

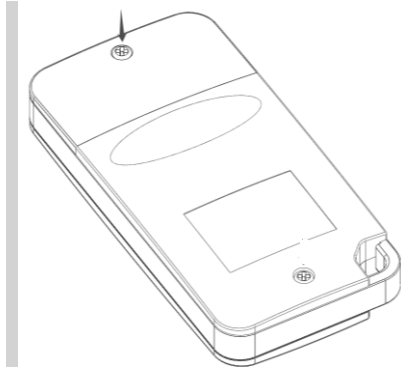
2. CLONE

ATTENTION: IN TX NEWCLONER (MULTICLONER) YOU CAN PROGRAMME A DIFFERENT BRAND AND FREQUENCY IN EACH BUTTON (CHANNEL) ONLY IN CLONE MODE.

DIRECT ENTRY MODE IN THE RECEIVER

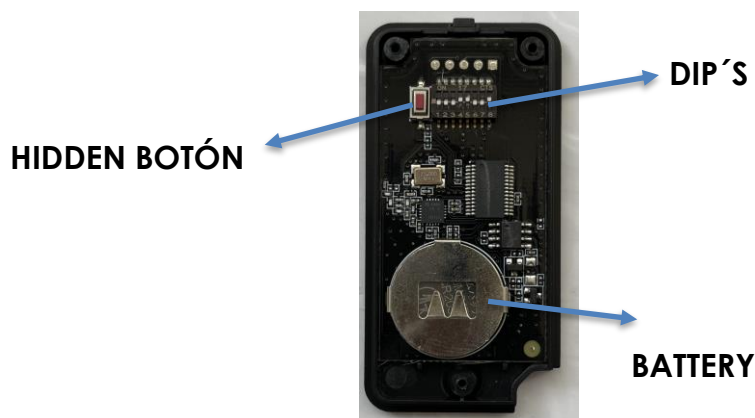
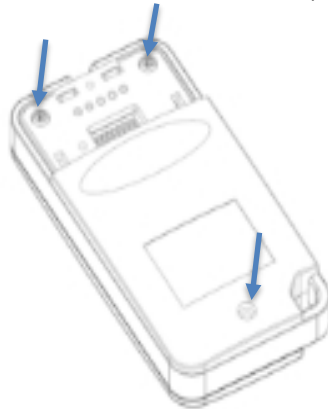
PROGRAMMING INSTRUCTIONS

1. Locate the selector DIP inside the remote. Remove the upper screw from the rear.



2. Select the DIP combination for the chosen brand. Go to table 1.

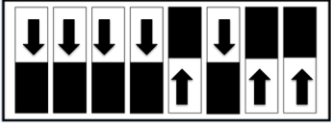

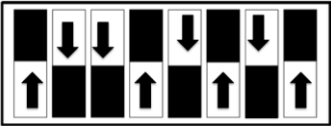

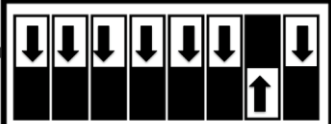

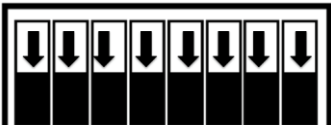

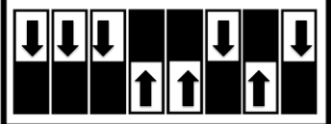

3. The remote is ready to be used. Please refer to your receiver's user manual.

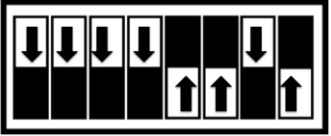

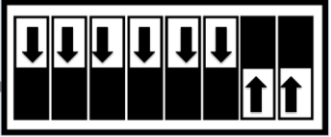

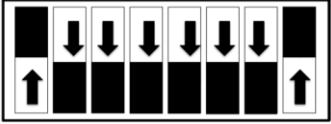

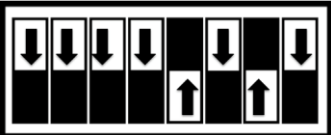

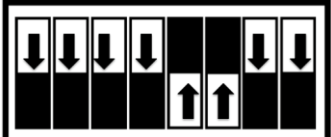



NOTE: To programme BFT, MUTANCODE and ERREKA it will be necessary to press the hidden button (with a clip) before pressing any remote's button (button 1 to 4).

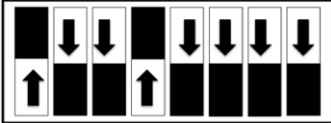

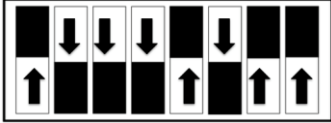

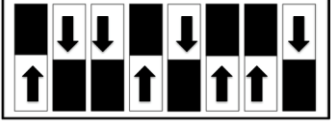

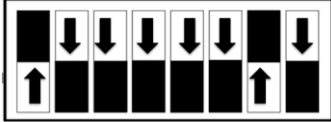

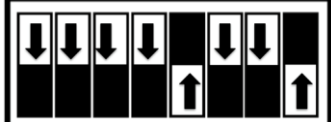

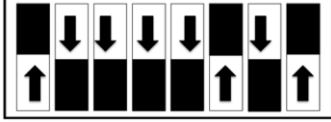

Table 1: Entering directly into the receiver.


Tabla 1: Entrar directamente en el receptor.

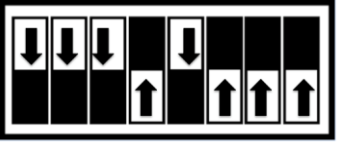

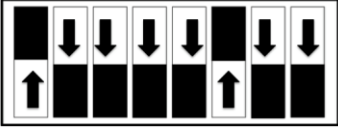

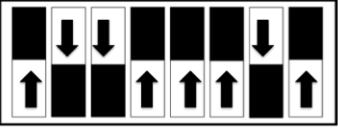

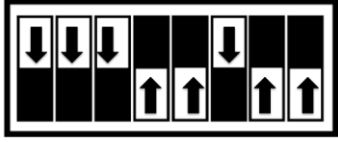

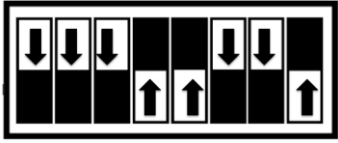

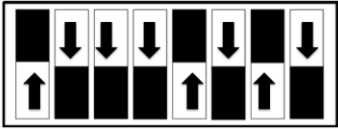

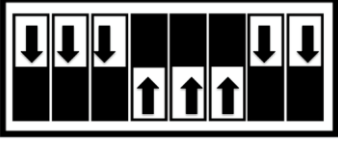

Num	DIP SWITCHES	R/F	Brand Marca	Original	Comments Comentarios
1	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con APRIMATIC TR 433.92 MHZ		
2	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	Compatible con APRIMATIC TR 433.92 MHZ		
3	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con BENINCA TO GO WV / WP T WV / WK CUPIDO 433.92 MHZ		
4	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con BFT MITTO 433.92 MHZ		Hidden button Botón semilla
5	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with CARDIN S449-QZ2 433.92 MHZ		

6	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	<p>Compatible con/with CENTURION 433.92 MHZ</p>		
7	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	<p>Compatible con/with DEA (KING SISTEM) GENIE GENIE GREEN GENIE WOOD MIO TR-2 433.92 MHZ</p>		
8	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	<p>Compatible con/with DITEC GOL4 GOL4C BIXLP2 433.92 MHZ</p>		
9	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	<p>Compatible con/with DOORHAN 433.92 MHZ</p>		
10	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	<p>Compatible con/with EMFA 433.92 MHZ</p>		

11	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con ERREKA SOL R SOL4R 433.92 MHZ		Hidden button Botónsemilla
12	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with FAAC XT 433 RC 433.92 MHZ		Red LED LED rojo
13	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with GIBIDI DOMINO AU1600 433.92 MHZ		
14	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	Compatible con/with KEY TXB-42 433.92 MHZ		
15	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	Compatible con/with KINGATE STYLO4 MYO4 C 433.92 MHZ		
16	<p>1 2 3 4 5 6 7 8</p> 	Encrypted Code	Compatible con/with LIFTMASTER BILLIONCODE 433.92MHZ		
17	<p>1 2 3 4 5 6 7 8</p> 	Encrypted Code	Compatible con/with Liftmaster Chamberlain Lobas 433.92 MHZ		

18	<p>1 2 3 4 5 6 7 8</p> 	Encrypted Code	<p>Compatible con/with Liftmaster Chamberlain Motorlift 700 Lobas Raynor Orion 433.92 MHZ</p>		
19	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	<p>Compatible con/with Marantec Twobi Raynor New England 433.92 mhz</p>		
20	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	<p>Compatible con/with MCT-3 Linear 433 MHZ</p>		
21	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	<p>Compatible con/with MOTOR LINE 433.92 MHZ</p>		
22	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	<p>Compatible con/with MUTAN CODE 433.92 MHZ</p>		Hidden button Botón semilla
23	<p>1 2 3 4 5 6 7 8</p> 	Encrypted Code	<p>Compatible con/with NICE FLOR-S 433.92 MHZ</p>		

24	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with NICESMILO 433.92 MHZ		
25	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with NOVOTROM NOVOFERM TORMATIC 433.92 MHZ		
26	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with PRASTEL MPSTF E MPSTP E TRQ P TC E 433.92 MHZ		
27	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	Compatible con/with PROTECO PTX433405 TX3 433.92 MHZ		
28	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with PUJOL VARIO 1 OCEAN 433.92 MHZ		Hidden button Botón semilla

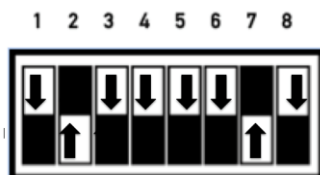
29	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	Compatible con/with AVANTI 433.92 MHZ		
30	<p>1 2 3 4 5 6 7 8</p> 	OPEN CODE	Compatible con/with ROLLTORE 433.92 MHZ		
31	<p>1 2 3 4 5 6 7 8</p> 		Compatible con/with SOMFY 433 Mhz		
32	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with SOMMER 434.4 Mhz		
33	<p>1 2 3 4 5 6 7 8</p> 	Rolling Code	Compatible con/with SOMMER 868.8 Mhz		
34	<p>1 2 3 4 5 6 7 8</p> 	Fixed Code	Compatible con/with TELCOMA TANGO 433.92 Mhz		
37	<p>1 2 3 4 5 6 7 8</p> 		Compatible con/with MEDVA		

38	<p>1 2 3 4 5 6 7 8</p>	<p>GENIUS 433 Mhz</p>	
----	------------------------	---	--

MODO CLON

INSTRUCCIONES DE PROGRAMACIÓN

1. Localice el selector DIP en la parte frontal del mando **CLONER (TX NEWCLONER)**. Usar un destornillador para retirar la tapa frontal. Ver página 1.
2. Seleccione la posición de los DIP para la marca deseada. Ejemplo: Código fijo. LA combinación de DIPs para código fijo se muestra en la imagen inferior.



3. Pulse el botón 5 (botón oculto/semilla) del **CLONER (TX NEW CLONER)** localizado en el agujero que se encuentra debajo de los botones visibles. Esto activa el modo clon y se encenderá el LED del mando.
4. Presione UNA VEZ y SUELTE el botón de nuestro mando en el que desea utilizar el mando a clonar.
5. Acercar el mando **CLONER** al mando **ORIGINAL**.
6. Mantener pulsado el mando **ORIGINAL**. Si el procedimiento se ha realizado correctamente, el LED del mando **CLONER** emitirá 3 flashes.

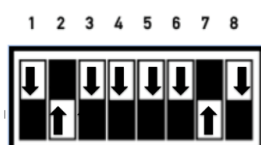


Para usar otro botón, repetir los pasos del 1 to 6.

CLONE MODE

PROGRAMMING INSTRUCTIONS

1. Locate the selector switch at the front of the remote **CLONER (TX NEW CLONER)**. Use a screw to lever the front case.
2. Select the DIP position of the chosen brand. Example: Fixed Code. The DIP combination for Fixed code is showed in the picture below.



3. Press button 5 (hidden button) located at the back of **CLONER (TX NEW CLONER)** remote to activate the cloning mode. The LED of the **CLONER** remote will light on.
4. Press ONCE and RELEASE the button (button 1 to 4) you want of act as the original one on the

CLONER remote.

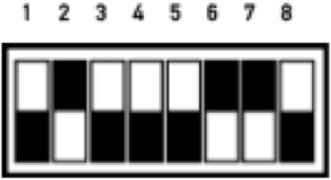

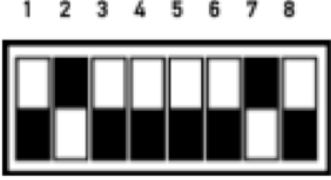



5. Place together the **CLONER** remote with the **ORIGINAL** remote.
6. Press and hold the button on the **ORIGINAL** remote until the LED of the **CLONER** flashes three times. This indicates the cloning was correctly done.



To use another button, repeat steps 1 to 6

MODO CLON / CLONE MODE

Num	DIP SWITCHES	Brand Marca	Original	Comentarios Comments
1	<div style="text-align: center;">1 2 3 4 5 6 7 8</div>	Compatible con/with CLEMSA Mastercode		
2	<div style="text-align: center;">1 2 3 4 5 6 7 8</div>	Compatible con/with DITEC		TXD
3	<div style="text-align: center;">1 2 3 4 5 6 7 8</div>	Compatible con/with FORSA 868 MHz		
4	<div style="text-align: center;">1 2 3 4 5 6 7 8</div>	Compatible con/with FAAC 868 MHz 433 MHz		<p>MODO ESCÁNER</p> <p>El mando escanea AMBOS V2, 433 y 868 MHz</p> <p>SCAN MODE</p> <p>Remote scans BOTH V2, 433 and 868 MHz</p>

5		<p>Compatible con/with V2 868 MHz 433 MHz</p>		<p>MODO ESCÁNER El mando escanea AMBOS V2, 433 y 868 MHz SCAN MODE Remote scans BOTH V2, 433 and 868 MHz</p>
6		<p>Compatible con código FIJO/with FIXED code</p>		<p>MODO ESCÁNER El mando escanea CUALQUIER mando con código fijo SCAN MODE Remote scans ANY fixed code remote</p>
7		<p>Compatible con código VARIABLE/with ROLLING code</p>		<p>MODO ESCÁNER El mando escanea CUALQUIER mando con código variable SCAN MODE Remote scans ANY rolling code remote</p>